

Fuel System Instructions

1. Enter fuel pump number then select **(ENTER)** button on keypad.
2. **Swipe the vehicles fuel FOB over the reader** to the right of the keypad.

Picture of FOB



Picture of Reader



3. Enter vehicles current **odometer reading** then select **(ENTER)** button on key pad.
4. **Fuel vehicle.**

Contact Fleet dispatch with questions (805) 672 – 2060.

Keep in Mind:

Saticoy, Moorpark, and Lockwood sites offer diesel at the pumps.

Motor pool vehicles do not use diesel fuel and the system will not allow diesel to be pumped into regular gas vehicle.

Diesel pumps can be identified by the green handle on the nozzle.

If the system will not pump and states, "Invalid fuel type," you are using the incorrect pump.

A different FOB is required for fueling. This is black/gray and is located on the vehicles.